


Fiero Serpentine Belt Tensioner Tool

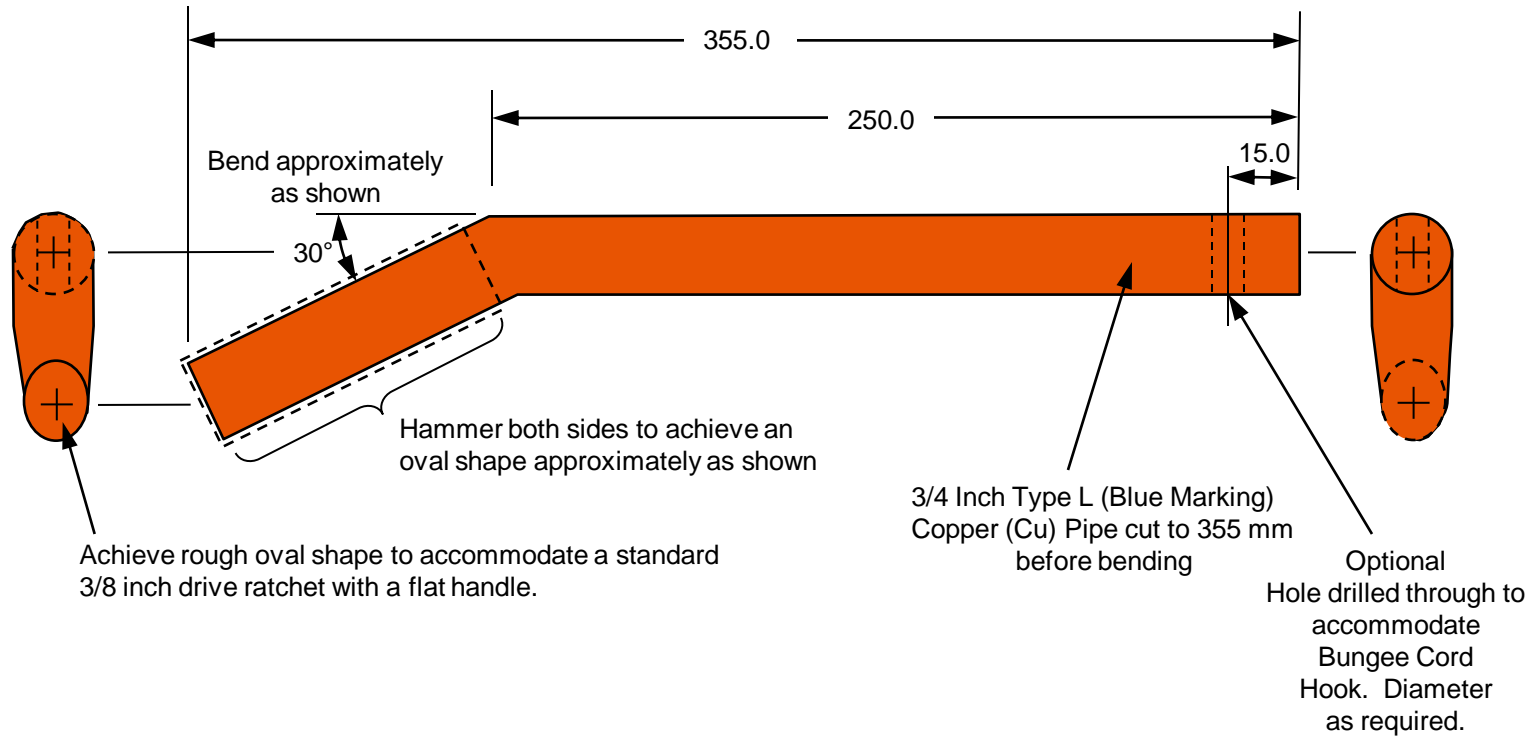


Notes


1. Drawing not to scale
2. All dimensions are in in mm unless otherwise specified
3. All linear tolerances are +/- 5 mm unless otherwise specified
4. All angular tolerances are +/- 5° unless otherwise specified

Fiero Serpentine Belt Tensioner Tool


1
Slip on Belt

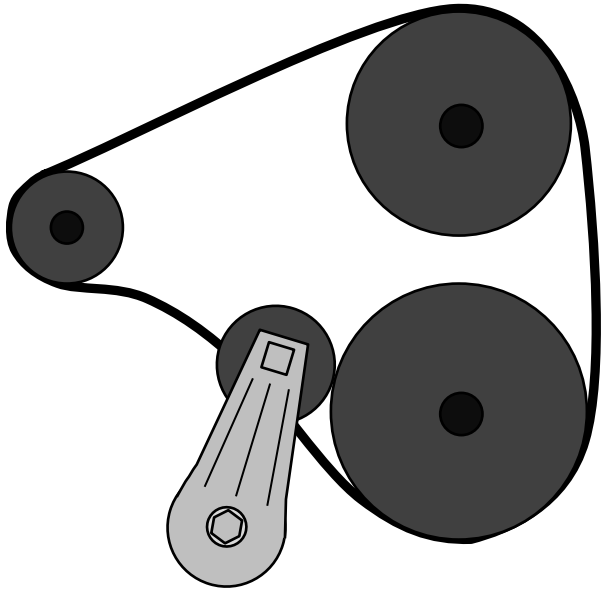

2
Attach Ratchet

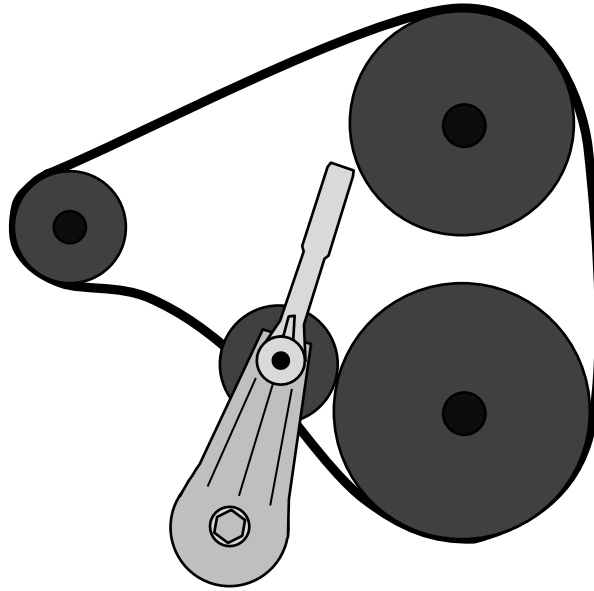


3
Attach Lever

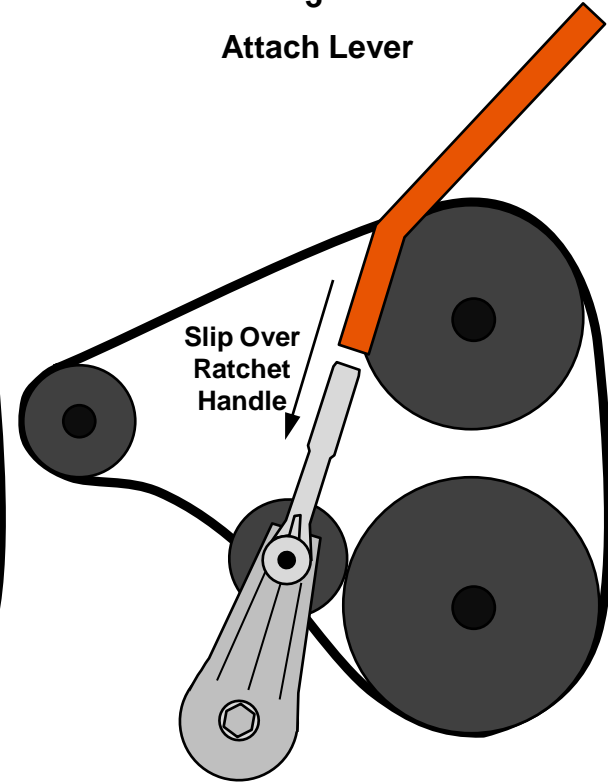

1. Drawing not to scale

Fiero Serpentine Belt Tensioner Tool

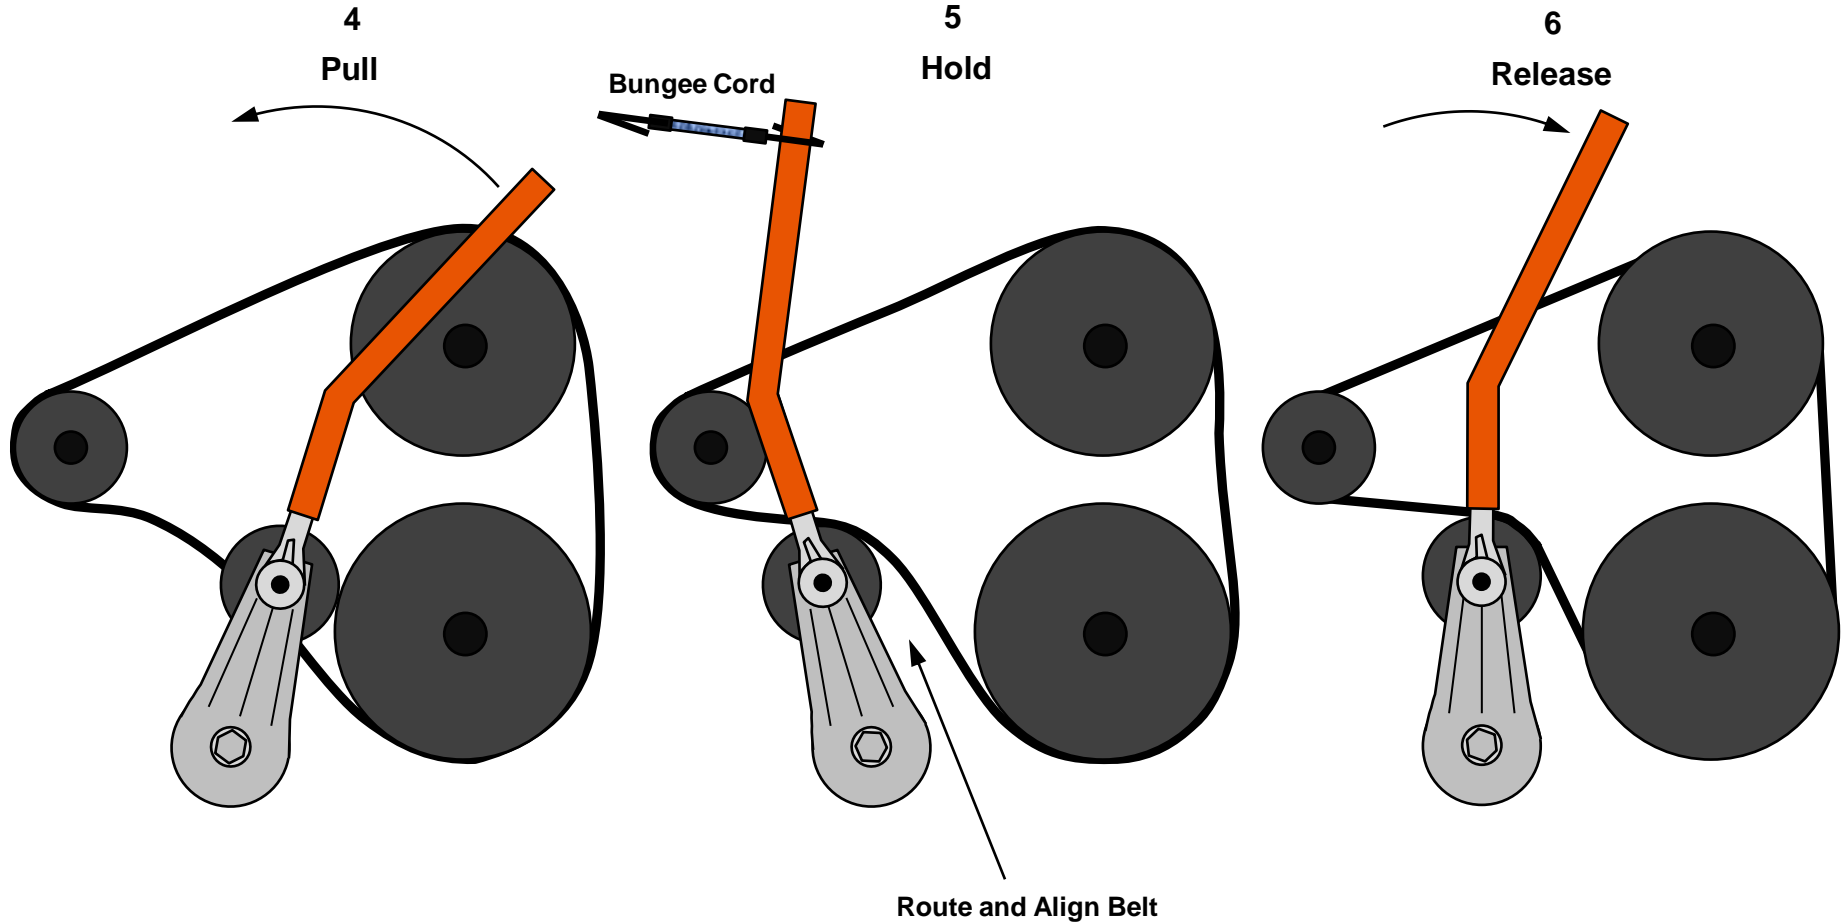


Notes

1. Drawing not to scale

Fiero Serpentine Belt Tensioner Tool

7
Ready

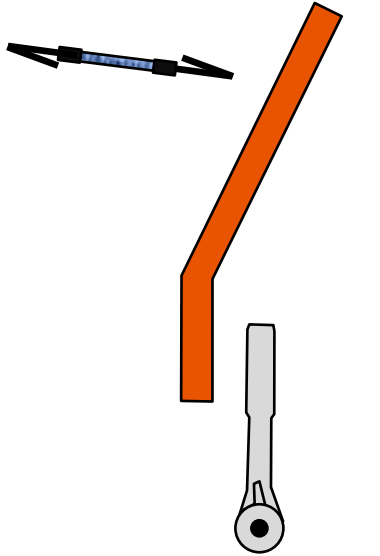

Remove Lever, Ratchet, and
Bungee Cord

